

15 in 1 Player's Kit PLUS

15 essential items for your Wii

ITEM No. - DGWII-1276
UPC - 8 45620 01276 3
COLOR - Assorted

PRODUCT FEATURES

- 1 Racing Wheel
- 1 Light Blaster
- 1 Golf Club
- 1 Tennis Racket
- 1 Baseball Bat
- 1 Pool Cue
- 1 Remote Cradle
- 2 Wrist Straps
- 2 Remote Savers
- 2 Remote Grips
- 1 Remote Jeli Sleeve
- 1 Nunchuk Jeli Sleeve

PRODUCT PACKAGING



1 Golf Club, 1 Baseball Bat, 1 Pool Cue & 1 Tennis Racket



1 Sharp Shot Light Blaster

2 Wrist Straps



1 Racing Wheel



2 Remote Savers



2 Game Grips



1 Remote Cradle



1 Remote & 1 Nunchuk Jeli Grip

TRANSLATIONS

	SPANISH	FRENCH
PACKAGING	NO	NO
USER'S GUIDE	YES	YES

*Wii Remote, Wii Nunchuck and Wii MotionPlus not included

SHIPPING INFORMATION

	QUANTITY	WIDTH (in.)	HEIGHT (in.)	DEPTH (in.)	CUBE (ft³)	WEIGHT (lbs.)	UPC NUMBER
SINGLE	1	12.5	10	2	0.15	1.00	8 45620 01276 3
MASTER	6	13.5	11	15.5	1.25	7.60	8 45620 01276 3
INNER	N/A	N/A	N/A	N/A	N/A	N/A	

User's Guide



Package Contents:

- Wii Remote Cradle
- Baseball Bat extension
- Tennis Racket extension
- Golf Club extension
- Pool Cue extension
- Sharp Shot
- Racing Wheel PLUS
- 1 Set of Jeli Grips
- 2 Game Grips
- 2 Wii Remote Savers
- 2 Wrist Straps
- User's Guide/Warranty Card
- Registration Card

NOTE: The Wii Remote Cradle, Sharp Shot and the Racing Wheel are not compatible with the Wii Remote Jacket. Be sure to remove the Wii Remote Jacket before attempting to install.

NOTE: The Wii Remote Cradle, Sharp Shot and Racing Wheel feature an infrared pass-through which allows the user to make on-screen selections without having to remove the Wii Remote.

Wii Remote Cradle and Sports Extensions

How to Use the Wii Remote Cradle and Sports Extensions:

1. Place the Wii Remote into the Wii Remote Cradle.
- NOTE: The Wii Remote Cradle can be used with or without the Wii MotionPLUS.
2. Depending on which game you are playing, choose the appropriate sports extension.

3. With the Wii Remote inserted into the Wii Remote Cradle, attach the Baseball Bat, Tennis Racket, Golf Club or Pool Cue extension to the top of the Wii Remote Cradle by twisting clockwise until the extension is completely installed.

Sharp Shot

Installing the Wii Remote without Wii MotionPLUS:

1. Open both latches located at the top of the Sharp Shot.
2. Insert the Wii Remote into the Sharp Shot by sliding it into the Wii Remote cradle of the Sharp Shot (directional pad end first with the buttons facing upward).
3. Slide the directional pad end of the Wii Remote towards the front of the Sharp Shot until it stops.
4. Close the latch nearest to the "A" button. If you are playing a game that does not require the Wii Nunchuk™, close the latch located near the back of the Sharp Shot and you are ready to play. If your game requires the use of the Wii Nunchuk, continue to step 5.
5. Through the back opening of the Sharp Shot, slip the connector plug of the Wii Nunchuk under the back latch on the Sharp Shot and connect the Wii Nunchuk to the Wii Remote. Make sure that the connector cover of the Wii Remote has been removed before inserting the connector plug of the Wii Nunchuk into the External Extension Connector of the Wii Remote.
6. Close the back latch.

Installing the Wii Remote with Wii MotionPLUS:

1. Open both latches located at the top of the Sharp Shot.
2. Insert the Wii Remote into the Sharp Shot by sliding it into the Wii Remote cradle of the Sharp Shot (directional pad end first with the buttons facing upward).
3. Slide the directional pad end of the Wii Remote towards the front of the Sharp Shot until it stops.
4. Close both latches on the top of the Sharp Shot. If you are playing a game that does not require the Wii Nunchuk, you are ready to play. If your game requires the use of the Wii Nunchuk, continue to step 5.
5. Make sure the connector cover of the Wii MotionPLUS has been removed and insert the connector plug of the Wii Nunchuk into the External Extension Connector of the Wii MotionPLUS.

NOTE: The top trigger of the Sharp Shot activates the A button, the bottom trigger activates the B button. Please refer to your game's User's Guide for button configuration.

How to Remove the Wii Remote:

1. If the Wii Nunchuk is attached to the Wii Remote or the Wii MotionPLUS, remove the Wii Nunchuk first before trying to remove the Wii Remote from the Sharp Shot. NOTE: Please refer to the Wii Remote's User's Guide for Wii Nunchuk removal instructions.
2. Open both latches located at the top of the Sharp Shot and lift the Wii Remote up from the back and slide the Wii Remote back until it is completely out of the Sharp Shot.

Racing Wheel PLUS

How to Install the Wii Remote into the Racing Wheel PLUS with Wii MotionPLUS:

1. Open the latch located on the front of the Racing Wheel PLUS.
2. Insert the wrist strap attached to the Wii Remote through the hole on the Racing Wheel PLUS and pull through.
3. Place the Wii Remote with Wii MotionPLUS into the wheel so that the directional button is located on the left side of the wheel.
4. Close the latch to secure the Wii Remote into the Racing Wheel PLUS. NOTE: Use the pass-through port on the Racing Wheel PLUS to navigate through any menus.

How to Install the Wii Remote into the Racing Wheel PLUS without Wii MotionPLUS:

1. Open the latch located on the front of the Racing Wheel PLUS.
2. Insert the wrist strap attached to the Wii Remote through the hole on the Racing Wheel PLUS and pull through.
3. Place the Wii Remote into the wheel so that the directional button is located on the left side of the wheel.
- NOTE: Make sure that the Wii Remote is pushed all the way to the left side of the

Racing Wheel PLUS

4. Close the latch to secure the Wii Remote into the Racing Wheel PLUS. NOTE: Use the pass-through port on the Racing Wheel PLUS to navigate through any menus.

Jeli Grip

1. Carefully slide the Wii Remote Jeli Grip over the Wii Remote.
2. Carefully slide the Wii Nunchuk™ Jeli Grip over the Wii Nunchuk.

Game Grip

1. Remove the battery cover from the back of the Wii Remote.
2. Replace the battery cover with the Game Grips for enhanced control during gameplay.

Wii Remote Saver

1. Carefully remove backing from the Wii Remote Saver and place onto the front of the Wii Remote, making sure not to obstruct the movement of the buttons.