for



www.dreamgear.net

Package Contents:

- 1 Racing Wheel
- 1 Racing Wheel Suction Base

RACING WHEEL SET UP:

1) To use the Racing Wheel, place your Wii Remote into the Racing Wheel's remote slot.

www.dreamgear.net



2) The Racing Wheel's steering wheel can be removed from the base by holding the base and pulling the wheel towards you.



FOR TECHNICAL SUPPORT PLEASE CONTACT: 1-877-999-DREAM or support@dreamgear.net

USING THE RACING WHEEL

There are 2 possible racing configurations when using the Racing Wheel.

1) Desktop Gameplay

This image shows the Racing Wheel being played on a desktop or table.



2) In-Air Gameplay

This image shows the Racing Wheel being played in mid-air.

Wheel Settings

Depending on the game you are playing, you may want to adjust the Racing Wheel's settings. The Racing Wheel can be locked for LEFT to RIGHT control only. The Racing Wheel can also be set to allow MUTLI-DIRECTIONAL control.

To lock and un-lock the Racing Wheel's directional setting, slide the control locking mechanism UP for COMPLETE control and DOWN for LEFT to RIGHT control only.

