



dreamGEAR
www.dreamgear.net

PACKAGE CONTENTS:

- 1 Wii Remote Handle
- 1 Wii Remote Handle for the Oar
- 1 Glow Sword Extension
- 1 Golf Club Extension
- 1 Frisbee Extension
- 1 Bow and Arrow Extension
- 1 Oar Extension
- 1 Table Tennis Paddle
- User's Guide/Warranty Card
- Registration Card

HOW TO SET-UP YOUR WII REMOTE INTO THE WII REMOTE HANDLE: (Used with the Glow Sword extension and the Golf Club extension)

1. Make sure that your Wii Remote is inside of its silicone sleeve.
2. Insert your Wii Remote (with silicone sleeve) into the Wii Remote handle.

NOTE: You can insert your Wii Remote into the remote handle with or without the MotionPlus attachment.

3. Attach the elastic remote strap across the Wii Remote by placing the strap on the designated tabs on both sides of the Wii Remote handle. The strap should fit between the directional button and the A button on your remote.
4. To remove the Wii Remote from the Wii Remote handle, detach the elastic strap from the pegs on both sides of the Wii Remote handle. Lift the Wii Remote from the bottom and slide out of the Wii Remote handle.

HOW TO SET-UP THE GLOW SWORD EXTENSION:

1. Insert 2 "AAA" batteries into the battery compartment located on the bottom portion of the Sword extension.
2. To attach the Wii Remote handle to the Sword extension, align the pegs located on the top of the cradle with the slots located on the bottom of the Sword extension.
3. Insert the Sword extension into the Wii Remote handle.
4. Turn the Sword extension counter-clockwise and lock into place.
5. Power the Sword ON/OFF with the switch located right below the battery compartment. The Sword will illuminate blue once the power switch is set to the ON position.
6. To detach the Wii Remote handle from the Sword extension, slide down the latch located on the top of the Wii Remote handle, turn the Sword extension clockwise and remove by lifting up and out.

NOTE: Use the IR Port on the Wii Remote Handle to navigate through the menus. You do not have to take out the Wii Remote from the Wii Remote Handle while navigating through menus.

HOW TO SET-UP THE GOLF CLUB EXTENSION:

1. To attach the Wii Remote handle to the Golf Club extension, align the pegs located on the top of the cradle with the slots located on the bottom of the Golf extension.
2. Insert the Golf Club extension into the Wii Remote handle.
3. Turn the Golf Club extension counter-clockwise and lock into place.
4. To detach the Wii Remote handle from the Golf Club extension, slide down the latch located on the top of the Wii Remote handle, turn the Golf Club extension clockwise and remove by lifting up and out.

NOTE: To navigate through the menus, simply twist the Golf Club extension to the side to align the IR Port with your television.

HOW TO SET-UP THE FRISBEE EXTENSION:

1. Make sure that your Wii Remote is inside of its silicone sleeve.
2. Insert your Wii Remote (with silicone sleeve) into the Frisbee.
3. Attach the elastic remote strap across the Wii Remote by placing the strap on the designated tabs on both sides of the Frisbee. The strap should fit between the directional button and the A button on your Wii Remote.
4. To remove the Wii Remote from the Frisbee, detach the elastic strap from the pegs on both sides of the Frisbee. Remove the Wii Remote from the Frisbee.

HOW TO SET-UP THE BOW AND ARROW EXTENSIONS:

1. Make sure that your Wii Remote is inside of its silicone sleeve.
2. Insert your Wii Remote (with silicone sleeve) into the Bow extension.
3. Attach the elastic remote strap across the Wii Remote by placing the strap on the designated tabs on both sides of the Bow extension. The strap should fit between the directional button and the A button on your remote.
4. Insert your Nunchuk into the Arrow extension.
5. A wrist strap is attached to Arrow extension for you wear for safety purposes.
6. To remove the Wii Remote from the Bow extension, detach the elastic strap from the pegs on both sides of the Bow extension. Push the back of the Wii Remote until out of the Bow extension.
7. To remove the Nunchuk from the Arrow extension, lift the Nunchuk up and out by the cord.

NOTE: Make sure you wear the attached wrist strap included on the arrow extension. This allows you to use the Archery set both usefully and effectively. For your safety, please DO NOT let go of the arrow extension when playing your Wii games.

NOTE: Use the IR Port on the Bow extension to navigate through the menus. You do not have to take out the Wii Remote from the Bow Extension while navigating through menus.

HOW TO SET-UP THE OAR EXTENSION:

1. Make sure that your Wii Remote is inside of its silicone sleeve.
2. To attach the Wii Remote handle to the Oar extension, align the pegs located on the top of the cradle with the slots located on the bottom of the Oar extension.
3. Insert your Wii Remote (with silicone sleeve) into the Wii Remote handle for the Oar.
4. Turn the Oar extension counter-clockwise and lock into place.
5. To detach the Wii Remote handle from the Oar extension, slide down the latch located on the top of the Wii Remote handle, turn the Oar extension clockwise and remove by lifting up and out.
6. To remove the Wii Remote from the Wii Remote handle, detach the elastic strap from the pegs on both sides of the Wii Remote handle. Lift the Wii Remote from the bottom and slide out of the Wii Remote handle.

NOTE: Use the IR Port on the Oar extension to navigate through the menus. You do not have to take out the Wii Remote from the Oar Extension while navigating through menus.

HOW TO SET-UP THE TABLE TENNIS PADDLE:

1. Make sure that your Wii Remote is inside of its silicone sleeve.
2. Insert your Wii Remote (with silicone sleeve) into the Table Tennis paddle.

NOTE: You can insert your Wii Remote into the Table Tennis paddle with or without the MotionPlus attachment.

3. Attach the elastic remote strap across the Wii Remote by placing the strap on the designated tabs on both sides of the Table Tennis paddle. The strap should fit between the directional button and the A button on your Wii Remote.
4. To remove the Wii Remote from the Table Tennis paddle, detach the elastic strap from the pegs on both sides of the Table Tennis paddle. Remove the Wii Remote from the Table Tennis paddle.

NOTE: Use the IR Port on the Table Tennis Paddle to navigate through the menus. You do not have to take out the Wii Remote from the Table Tennis Paddle while navigating through menus.

NOTE: Always practice safety first. Make sure the Wii Remote handle is attached properly and securely to the extension. Be aware of your surroundings and stay a safe distance from all objects. DO NOT ever swing your Wii Remote at anyone or anything.

DISCLAIMER: dreamGEAR is NOT liable for any direct, indirect, punitive, incidental, special, consequential damages, or any damages whatsoever arising out of or connected with the use or misuse of this product.