

!Sound

WARRANTY CARD

dreamGEAR®

You have purchased a quality product that has been subjected to a thorough series of tests to ensure the highest level of dependability and compatibility. It is unlikely that you will experience any problem but if a defect should become apparent during the use of this product, dreamGEAR warrants to the original consumer purchaser that this product will be free from defects in material and workmanship for a period of 120 days from the date of your original purchase. If a defect covered by this warranty occurs dreamGEAR, at its option, will repair or replace the product purchased at no charge.

This warranty does not cover normal wear and tear, abusive use or misuse, modification, tampering or by any other cause not related to either materials or workmanship. This warranty does not apply to products used for any industrial, professional or commercial purposes.

To obtain warranty service send the defective product postage prepaid, along with a copy of the original sales receipt showing purchase date to:

Attention: Returns Department
dreamGEAR, LLC
P.O. Box 478
Torrance, CA 90508

For further information please call our Customer Hotline at 877-999-DREAM (International customers please call 310-222-1045), or visit our websites www.issound.net or www.dreamgear.net. Please allow 4 to 6 weeks for processing.

Quad Dock Pro

USER'S GUIDE



FOR TECHNICAL SUPPORT
PLEASE CONTACT: 1-877-999-DREAM
or support@dreamgear.net
www.dreamgear.net

NOTE: Be sure and keep your rechargeable battery packs and the Quad Dock Pro clean. Dirt and debris harm the battery contacts. Use a dry cloth to clean. DO NOT use water or any chemicals to clean.

- Quad Dock Pro are not damaged.
- Make sure that the contacts on the rechargeable battery pack and the Dock Pro is free from debris.
- Make sure that the rechargable battery pack is making proper contact with the charging terminals on the Quad Dock Pro. Make sure the Quad Pro securely.
- Make sure the rechargeable battery pack is inserted into the Quad Dock

Question: My rechargeable battery pack is not charging.

- Make sure that the AC Adapter is plugged in properly and securely into the Quad Dock Pro.

Answer: The LED lights are not lighting up.

TROUBLESHOOTING:

NOTE: The Quad Dock Pro is compatible with most Xbox 360 compatible battery packs. Additional rechargeable battery packs can be purchased separately.

4. To release the rechargeable battery pack, hold down the button on the battery pack and lift up to remove.
3. Insert your rechargeable battery pack (not included) on to the Quad Dock Pro and make contact with the charging terminal. The LED in front will illuminate **RED** indicating that the charge cycle has begun. When the charge cycle is complete, the LED will illuminate **BLUE**.
2. Plug the included AC Adapter into the DC input located on the back of the Quad Dock Pro.
1. Remove all contents from the packaging.

GETTING STARTED:

- Quad Dock Pro
- 110/240V AC Adapter
- User's Guide
- Warranty Card

CONTENTS:



- CONTENIDO:**
- Módulo Cuádruple Pro
 - Adaptador de CA de 110/240V
 - Guía del usuario
 - Tarjeta de garantía

INSTALACIÓN:

1. Retire todo el contenido del embalaje.

2. Conecte el adaptador de CA a la entrada de CC ubicado en la parte trasera del Módulo Cuádruple Pro
3. Inserte el paquete de baterías recargables (no viene incluido) en el Quad Dock Pro y haga contacto con el terminal cargador. La luz **ROJA** del LED del frente indicará que el ciclo de carga ha comenzado. Cuando finalice el ciclo de carga, el LED se tornará **AZUL**.
4. Para retirar las baterías, mantenga presionado el botón en el paquete de baterías y levante para retirar.

NOTA: El Quad Dock Pro es compatible con la mayoría de los paquetes de baterías compatibles con Xbox 360. Se pueden comprar por separado paquetes adicionales de baterías recargables.

RESOLUCIÓN DE PROBLEMAS:

Pregunta: Las luces del LED no se encienden.
Respuesta:

- Verifique que el adaptador de CA se encuentre adecuadamente conectado al Módulo Cuádruple Pro.

Pregunta: Mi batería recargable no están cargando.
Respuesta:

- Verifique que las baterías recargables se encuentren adecuadamente colocadas en Módulo Cuádruple Pro.
- Verifique que el paquete de baterías recargables se encuentre haciendo contacto adecuado con los terminales de carga del Módulo Cuádruple Pro. Verifique que el Módulo Cuádruple Pro no tenga residuos.
- Verifique que los contactos de las baterías recargables y del Módulo Cuádruple Pro no estén dañados.

NOTA: Asegúrese de mantener limpios las baterías recargables y el Módulo Cuádruple Pro. La suciedad y los desperdicios dañan los contactos de las baterías. Utilice un paño seco para limpiar. NO utilice agua ni productos químicos para limpiar.



- CONTENU:**
- Quad Dock Pro
 - Adaptateur 110/240 VCA
 - Guide de l'utilisateur
 - Carte de la garantie

MISE EN ROUTE:

1. Enlevez le contenu de l'emballage.

2. Branchez l'adaptateur CA inclus dans l'entrée CC située à l'arrière de Quad Dock Pro.
3. Insérez votre batterie rechargeable (non fournie) dans le Quad Dock Pro et mettez en contact avec la borne de charge. La LED devant s'allume en **ROUGE** pour signaler que le cycle de charge a commencé. Lorsque le cycle de charge est terminé, la diode LED s'allume en **BLEU**.
4. Pour dégager le bloc de piles rechargeables, maintenez le bouton sur le bloc de piles enfoncé et soulevez pour enlever.

REMARQUE: Le Quad Dock Pro est compatible avec la plupart des packs batteries compatibles Xbox 360. Vous pouvez acheter des blocs de piles rechargeables séparément.

DÉPANNAGE:

Question: Les diodes LED ne s'allument pas.
Réponse:

- Assurez-vous que l'adaptateur CA est correctement branché dans Quad Dock Pro.

Question: Ma pile rechargeable ne se charge pas.
Réponse:

- Assurez-vous que le bloc de piles rechargeables est correctement logé dans Quad Dock Pro.
- Assurez-vous que le bloc de piles rechargeable connectées effectue le contact avec les terminaux de chargement sur le Quad Dock Pro. Veillez à ce que le Quad Dock Pro ne comporte pas de débris.
- Veillez à ce qu'aucun des contacts sur le bloc de piles rechargeables et le Quad Dock Pro ne soient pas endommagés.

REMARQUE: Veillez à ce que vos blocs de piles rechargeables et Quad Dock Pro soient toujours propres. Les impuretés et les débris peuvent endommager les contacts des piles. Utilisez tissu sec pour nettoyer. N'UTILISEZ PAS d'eau ni de produits chimiques pour nettoyer.